



Channel 9

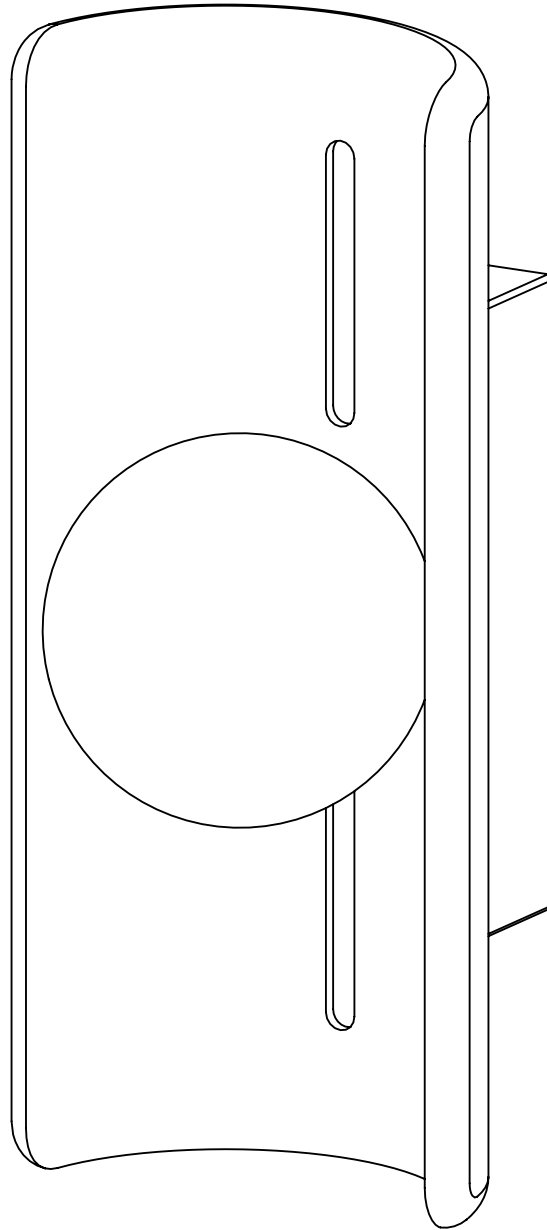


Channel 9 Contents

Remove all parts from box onto a clean, soft surface and inspect for defects or damage.

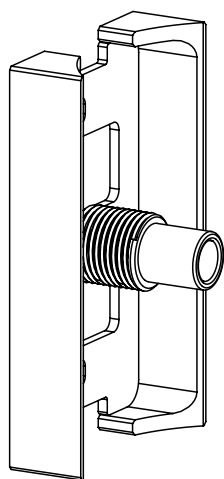


Back Rib Assembly

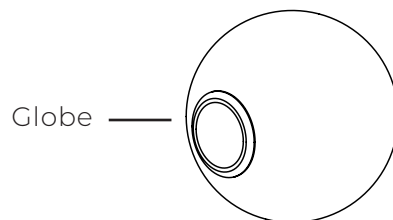

Globe




Collar Nut

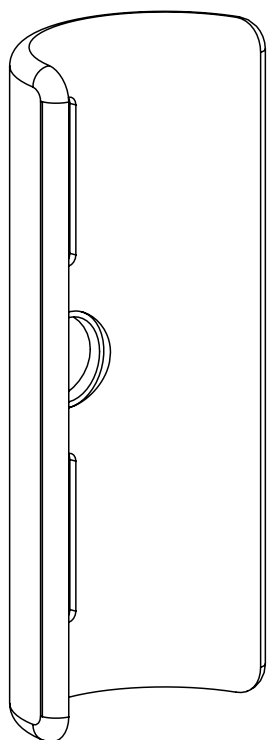

Shade




Collar Nut Tool

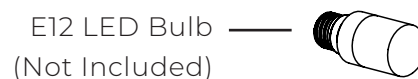


E12 LED Bulb
(Not Included)



3x Wire Nuts

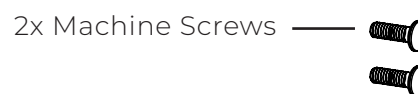


2x Machine Screws

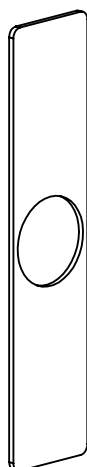


Wire Cover

1. Hold the back rib assembly close to the wall and connect the fixture ground wire to the wall ground wire.
2. Connect the +/- fixture wires to the +/- wall wires. Tuck all wires into the j-box.
3. Mount the back rib assembly to the j-box with the 2x machine screws.

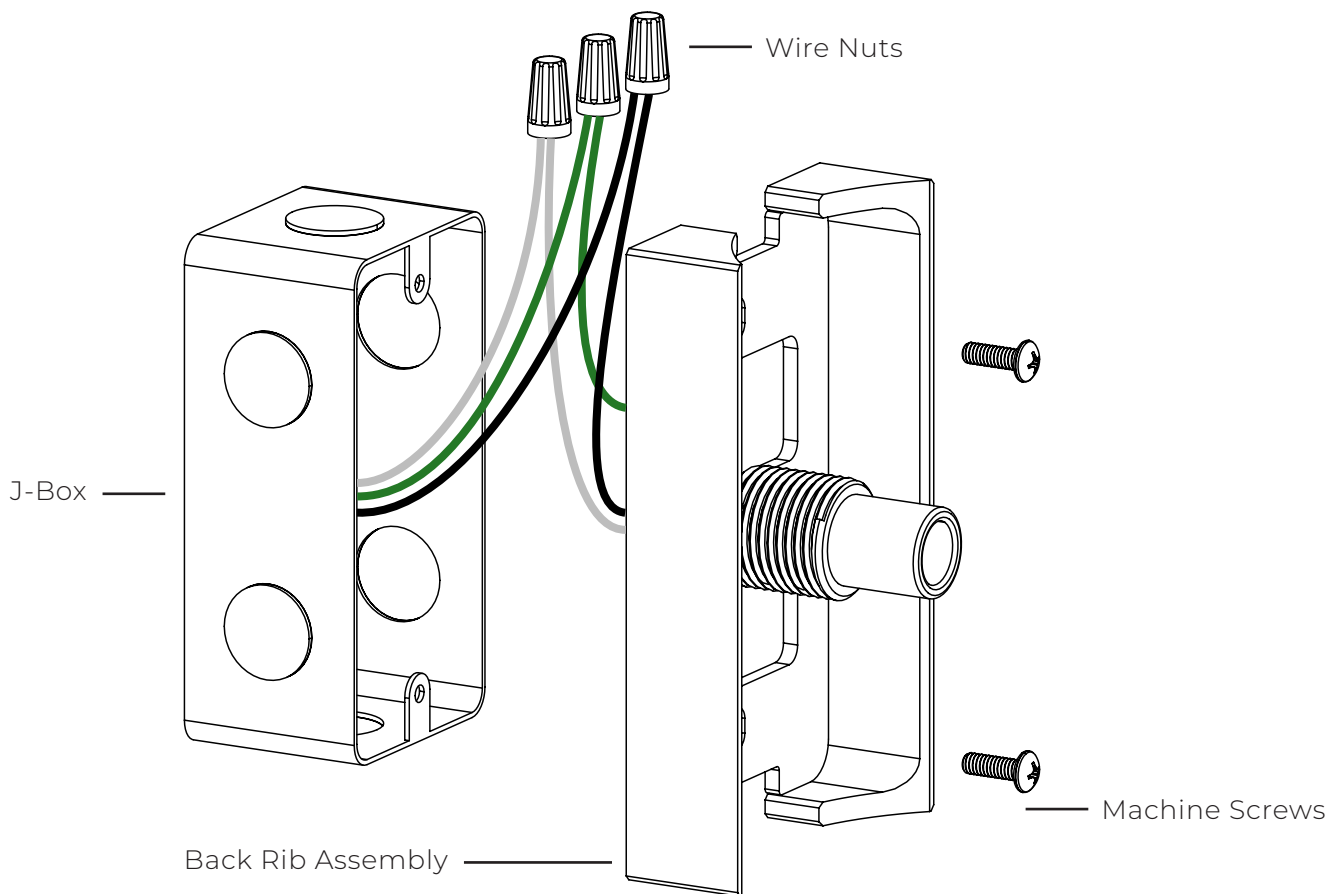

4. Align the hole in the wire cover with the socket, then slide the cover onto the back rib assembly.
5. Slide the shade onto the back rib assembly so that the socket passes through the hole in the shade.
6. Thread the collar nut onto the socket. Use the collar nut tool to tighten.

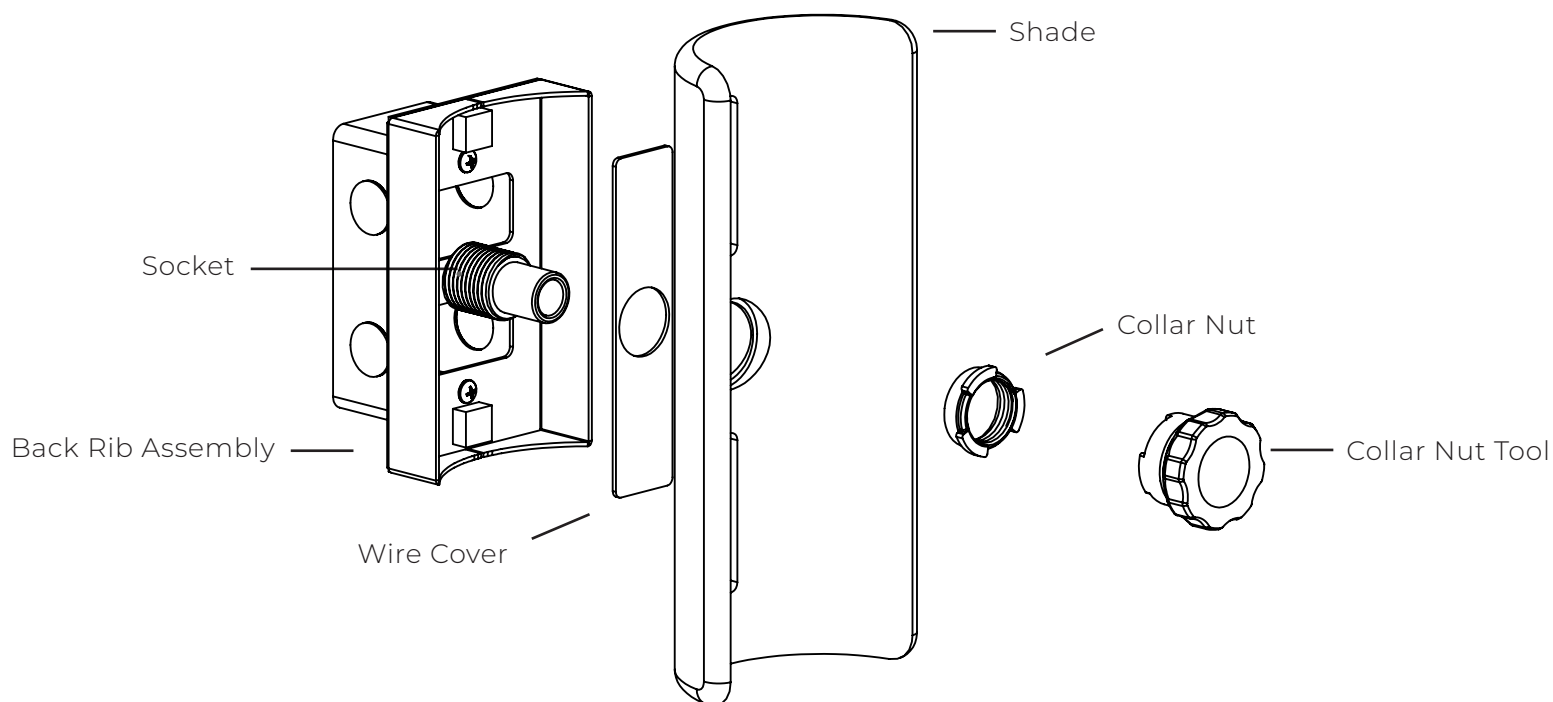

6. Thread the bulb into the socket.
7. Thread the globe onto the socket.

