



Paloma Pendant

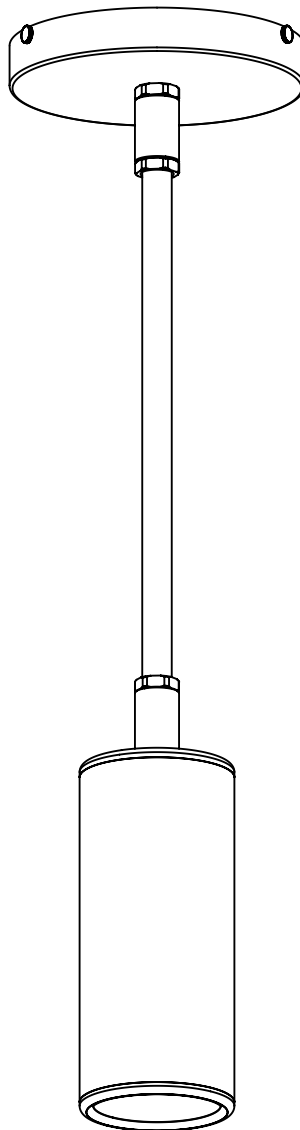


Paloma Pendant Contents

Remove all parts from box onto a clean, soft surface and inspect for defects or damage.

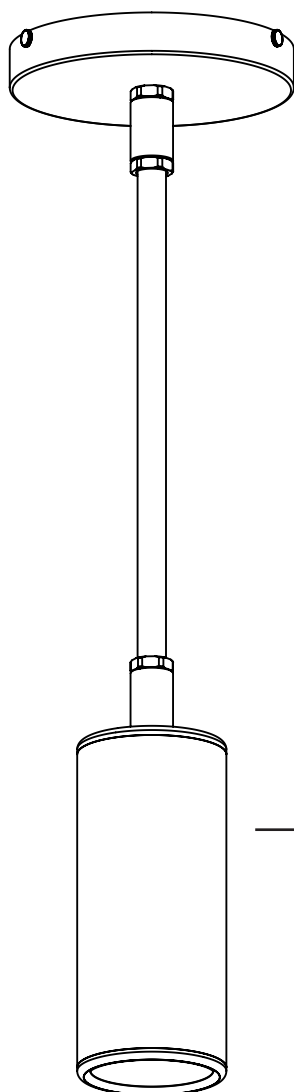


— Paloma Pendant

E12 LED Bulb
(Not Included)

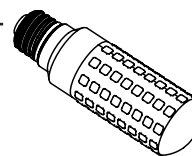


3x Wire Nuts

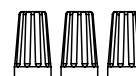

2x Machine Screws



1. Disconnect the crossbar from the Paloma canopy by unthreading the thumb screws.
2. Pull the ceiling wires through the crossbar and connect the ground wires. Mount the crossbar to the j-box using the 2x machine screws.
3. Connect the +/- fixture wires to the +/- ceiling wires.
4. Re-connect the Paloma canopy to the crossbar with the thumb screws, making sure to tuck the wires and wire nuts inside.

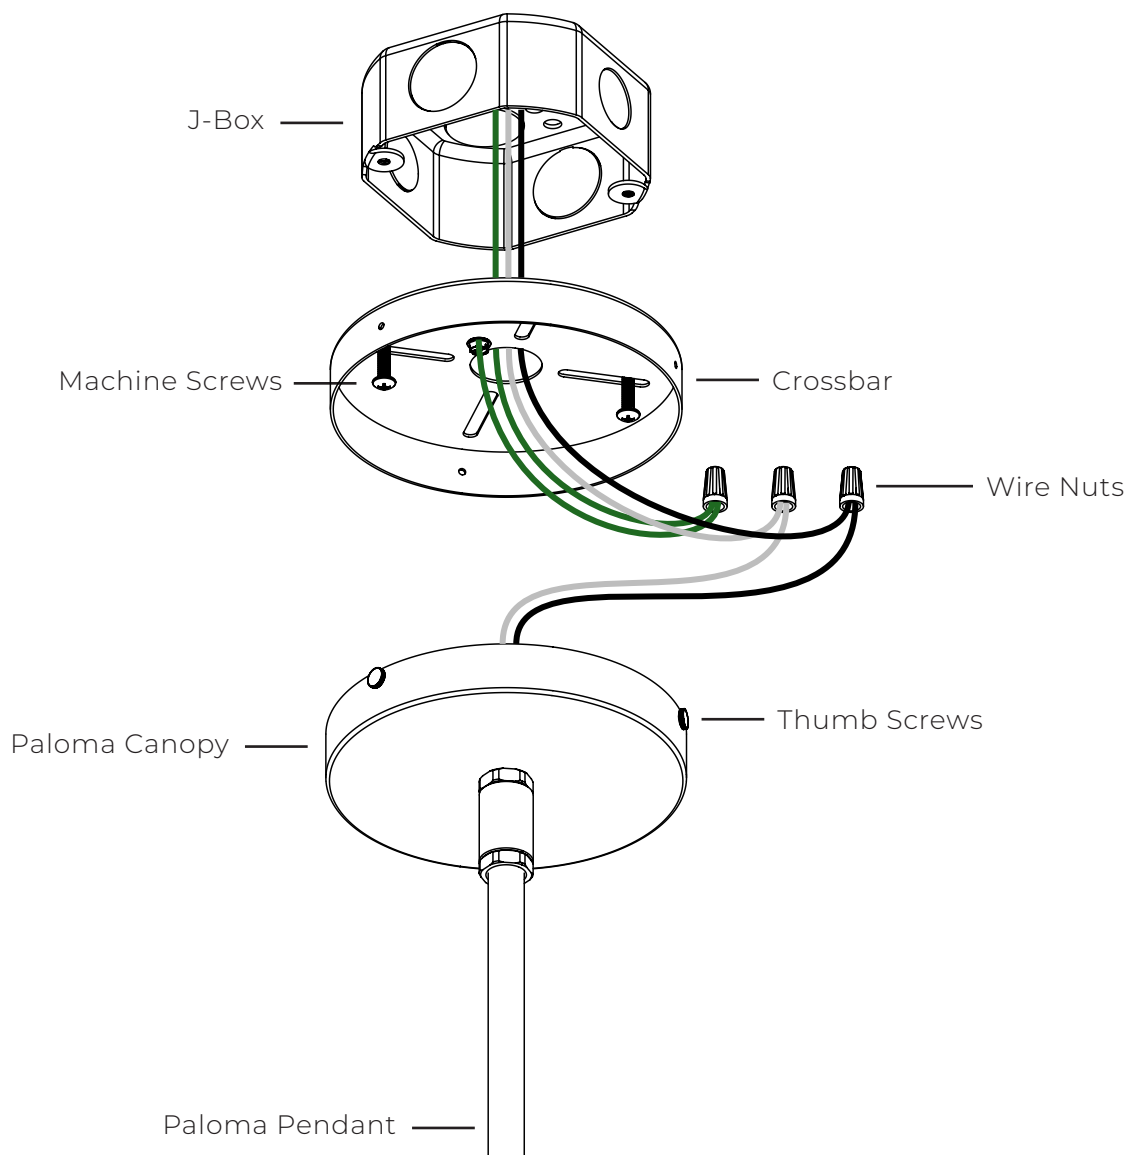

5. Unthread the shade from the socket collar.
6. Thread the bulb into the socket.
7. Re-thread the shade onto the socket collar.

