



Marmont 8

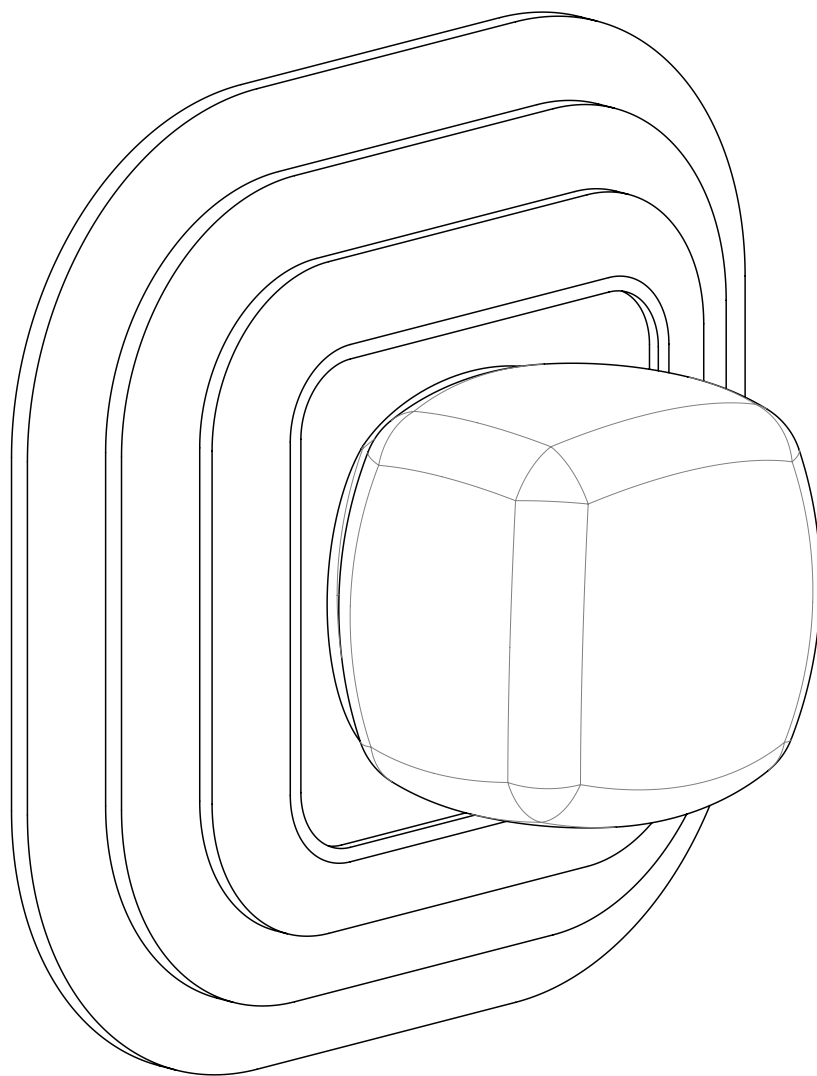


Marmont 8 Contents

Remove all parts from box onto a clean, soft surface and inspect for defects or damage.

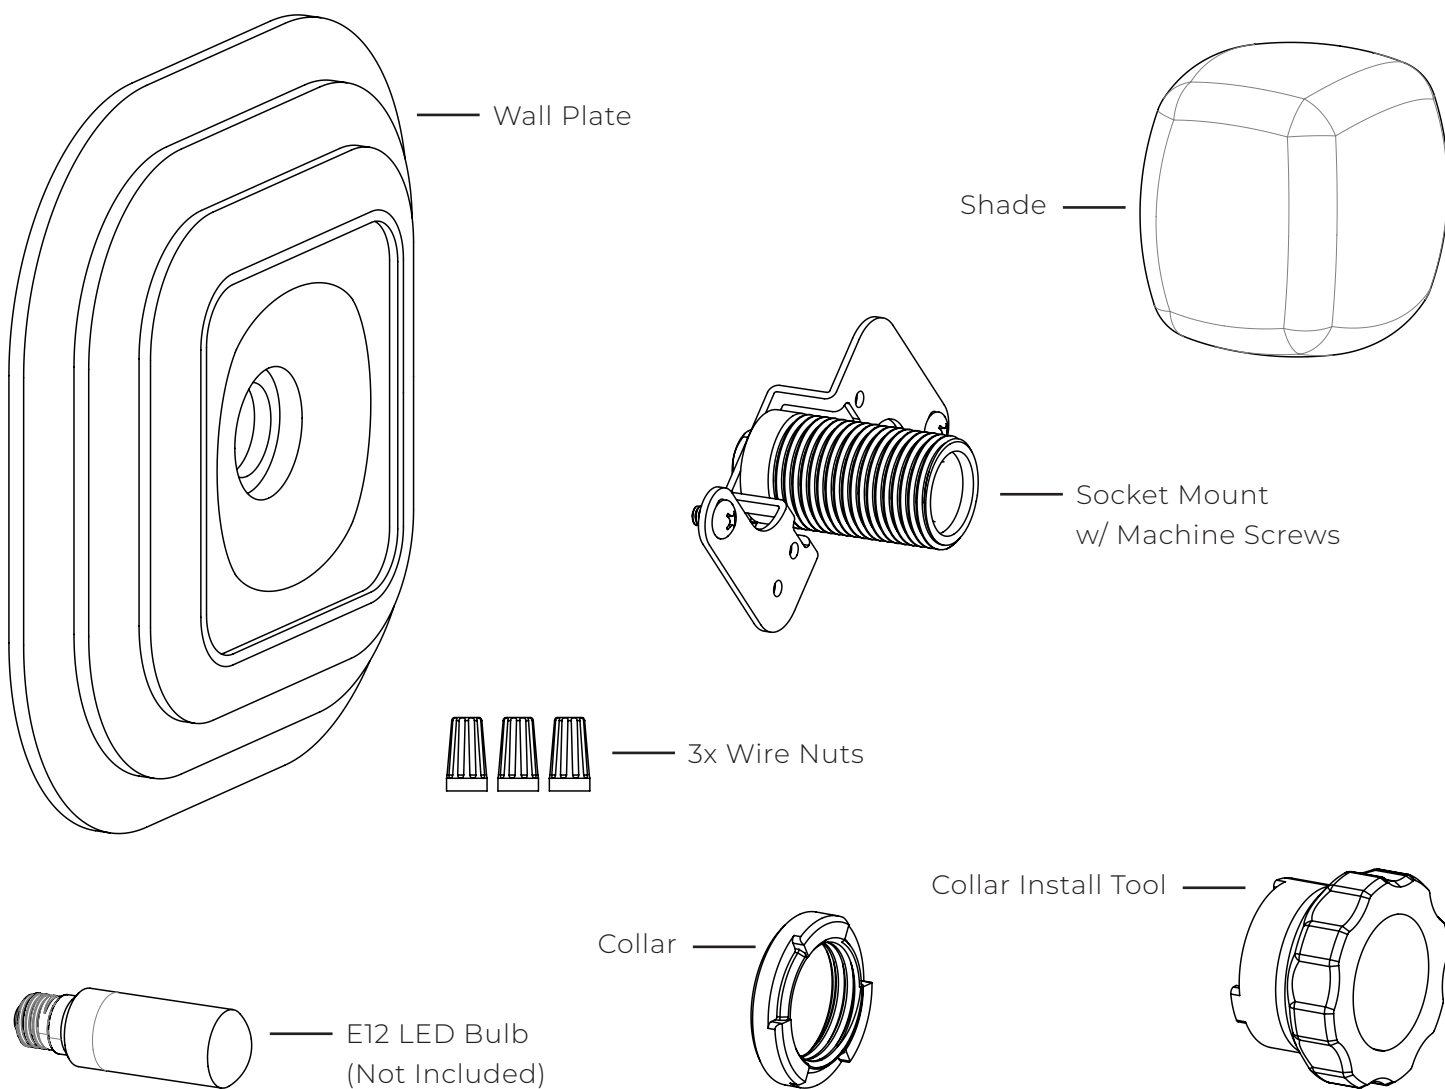


1. Connect the fixture ground wire to the wall ground wire. Connect the +/- fixture wires to the +/- wall wires.
2. Attach the socket mount to the j-box using the 2x machine screws, making sure to tuck the wires and wire nuts inside the j-box.

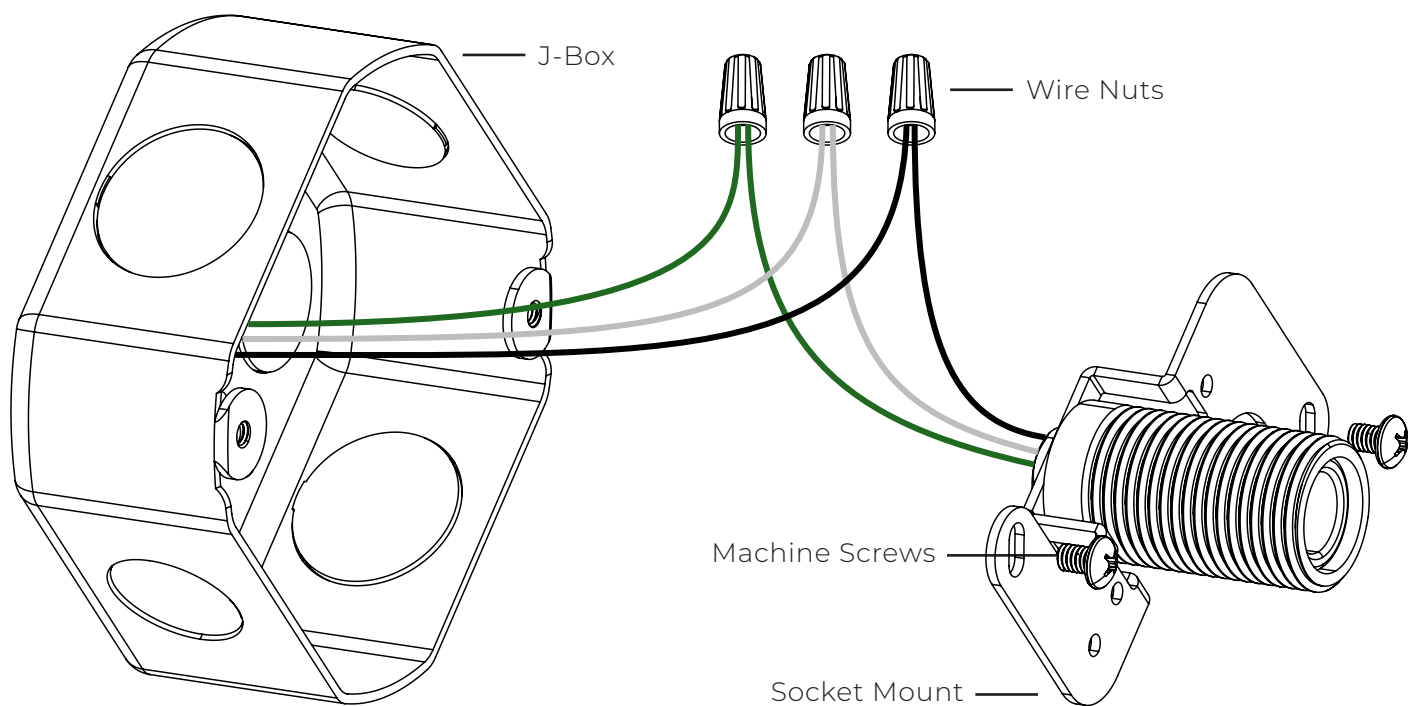

3. Slide the wall plate over the socket.

4. Thread the collar onto the socket and tighten using the collar install tool, making sure the wall plate is in the proper orientation.

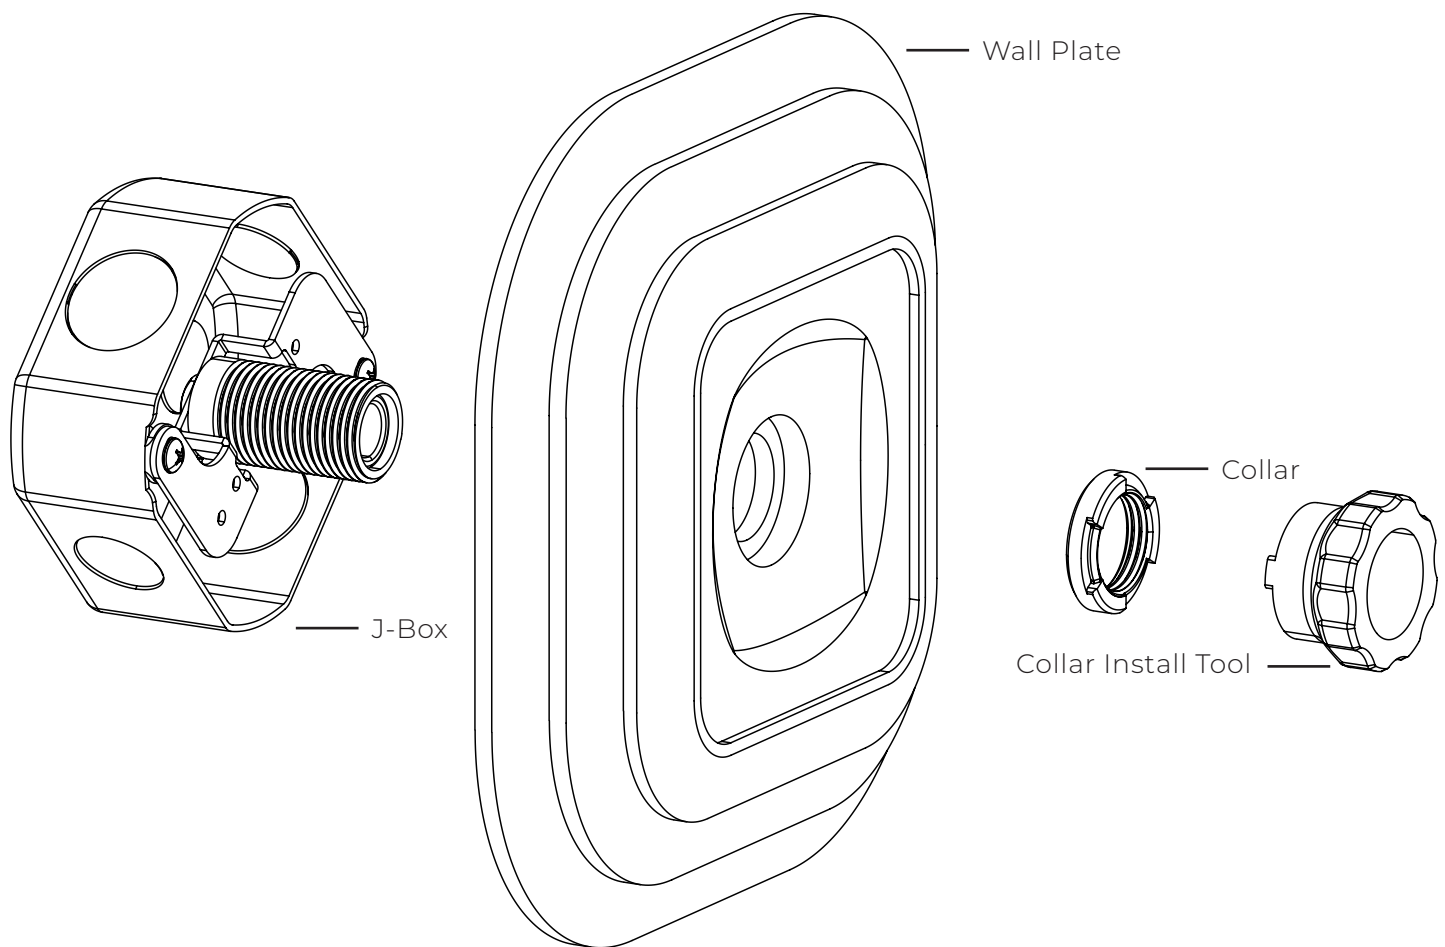

5. Screw the E12 LED bulb (not included) into the socket.
6. Thread the shade onto the socket, ensuring it is fixed in the proper orientation.

