



## Porto Semi Flush Mount

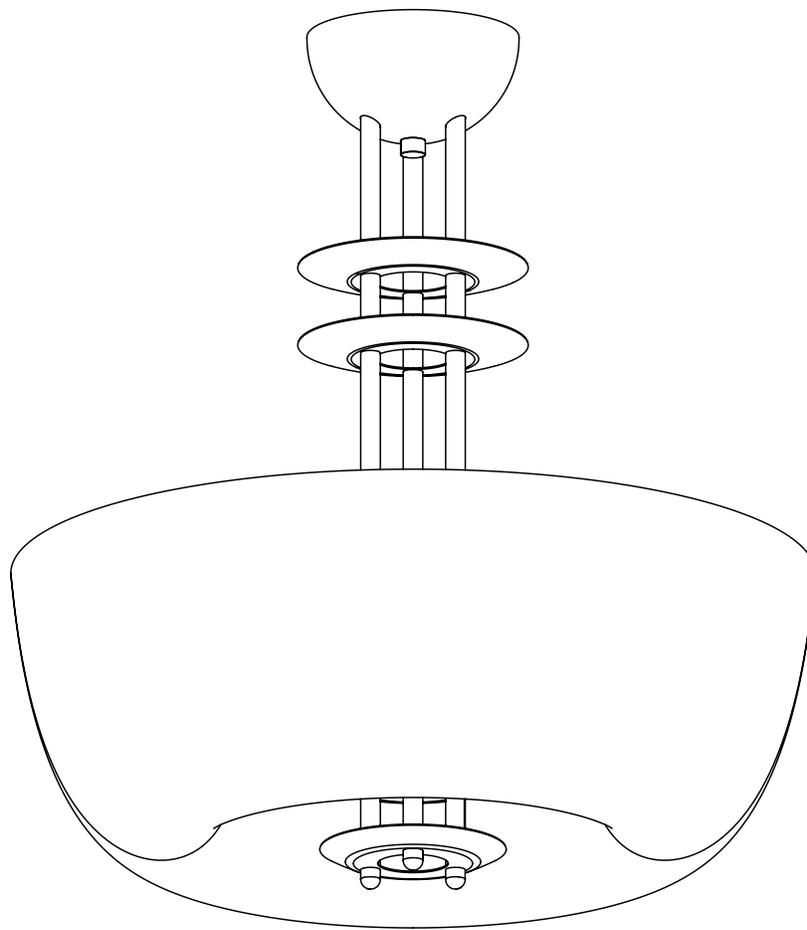


## Porto Semi Flush Mount Contents


Remove all parts from box onto a clean, soft surface and inspect for defects or damage.

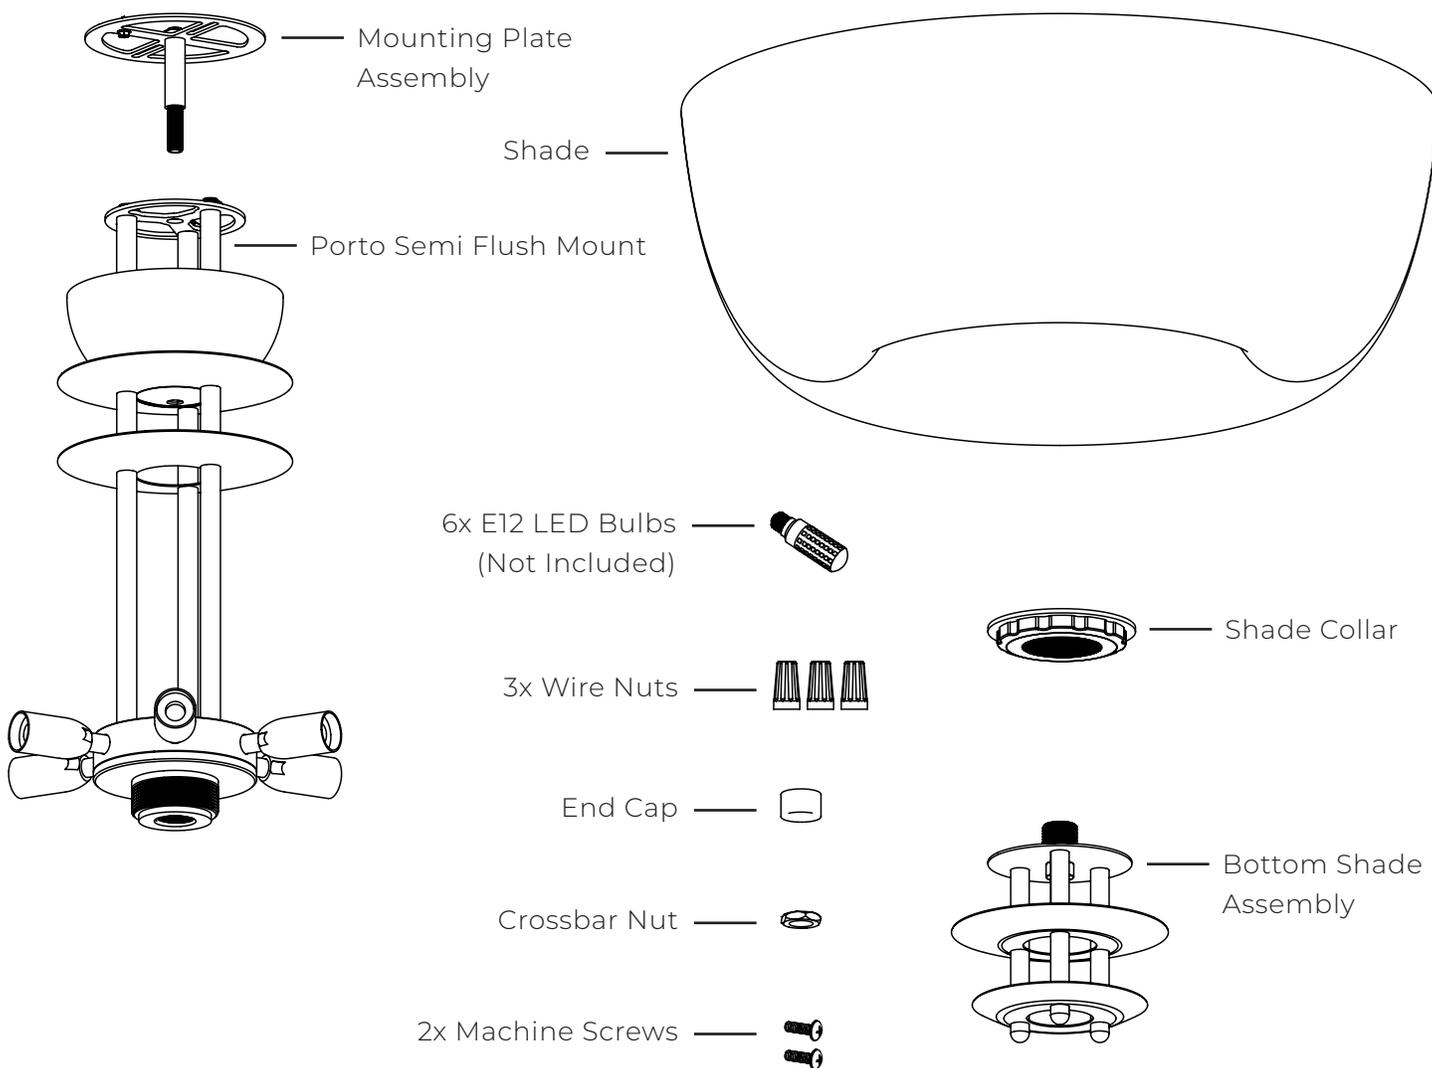

1. Attach the mounting plate assembly to the j-box using the 2x machine screws.
2. Slide the fixture crossbar over the mounting plate assembly and fasten together using the crossbar nut.
3. Connect the ground and +/- fixture wires to the ground and +/- ceiling wires.
4. Slide the canopy up to the ceiling and connect using the end cap, making sure to tuck the wires and wire nuts inside.

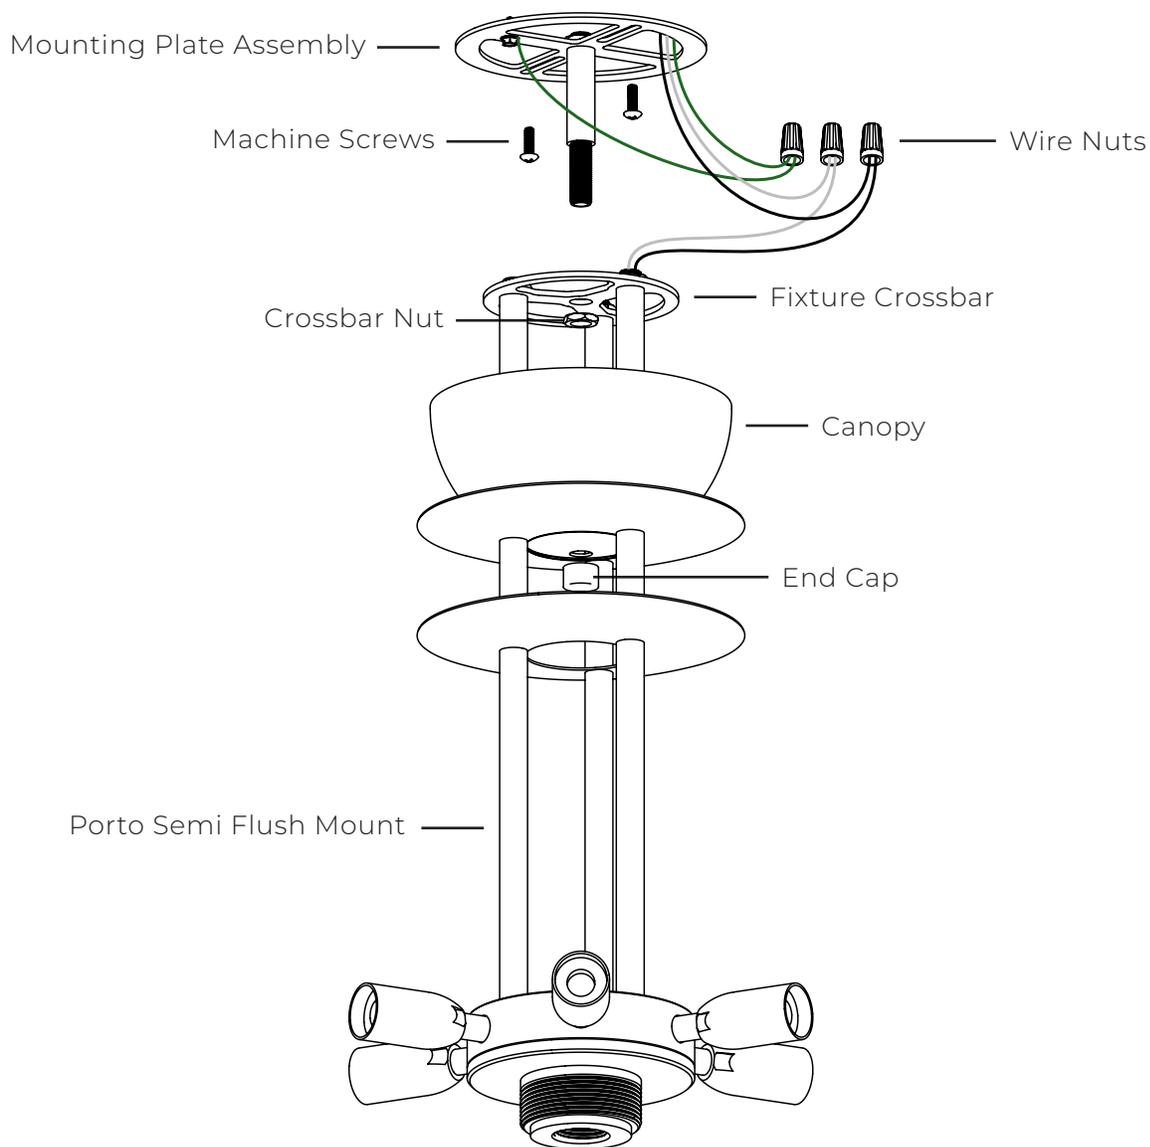

5. Thread the 6x E12 LED bulbs (not included) into the 6x sockets.
6. Slide the shade up over the fixture and tighten in place by threading on the shade collar.

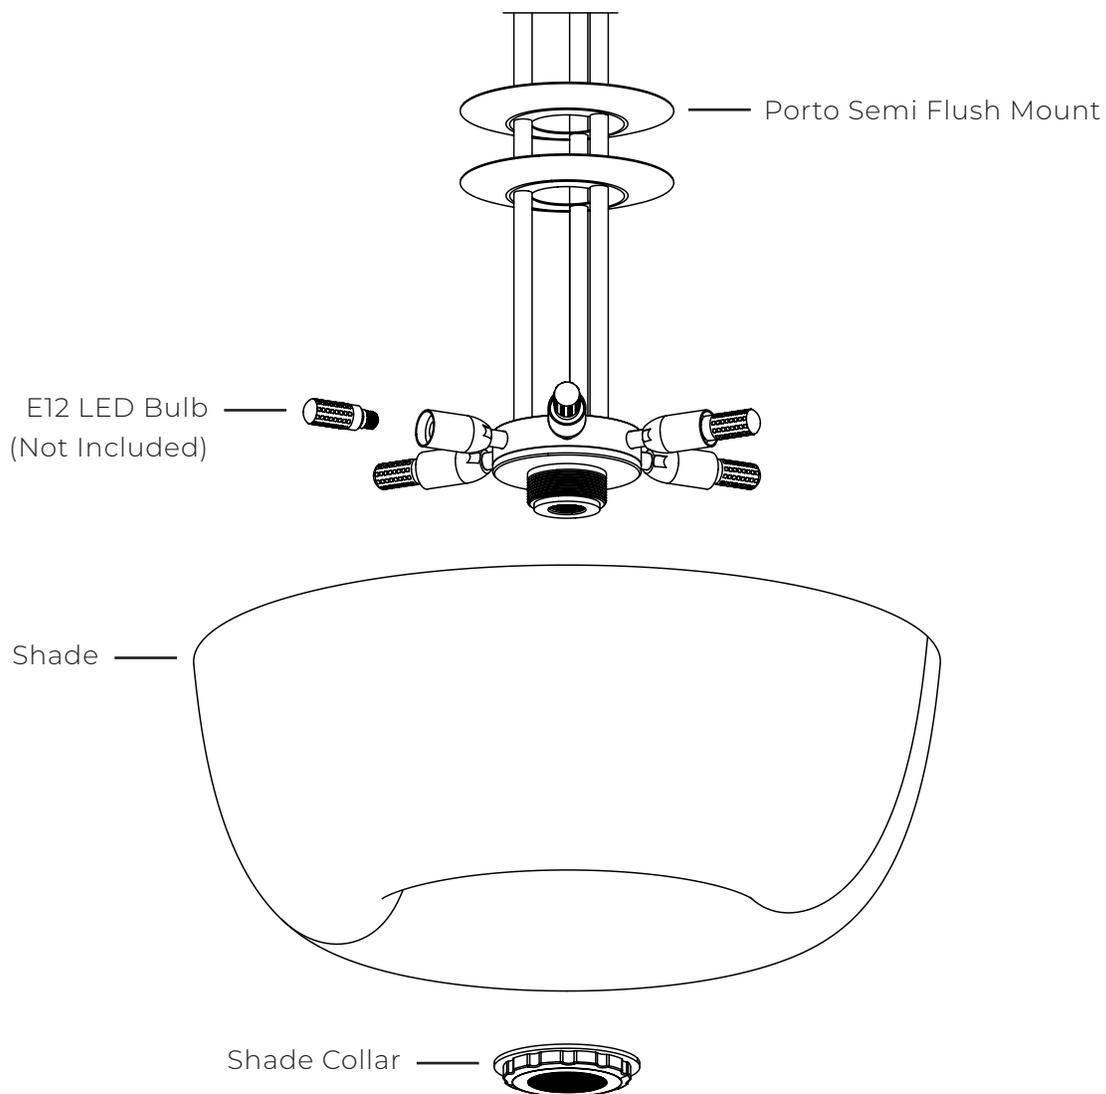

7. Thread the bottom shade assembly into the shade collar until tight.

